


How to configure the Function button on the MCo2

How to configure the Function button on the MCo2

1. To configure the customisable Function button, from the Home screen swipe up to access the App tray.
2. Tap the **Settings** icon then scroll down and tap **Accessibility**.
3. Scroll down and tap **Program Key Control**.
4. Currently the option is **Nothing** (default) or **Airplane Mode**.
5. Pressing the Function button will enable **Airplane mode**.
6. To disable **Airplane mode**, swipe down twice and tap **Airplane mode** to deactivate it.

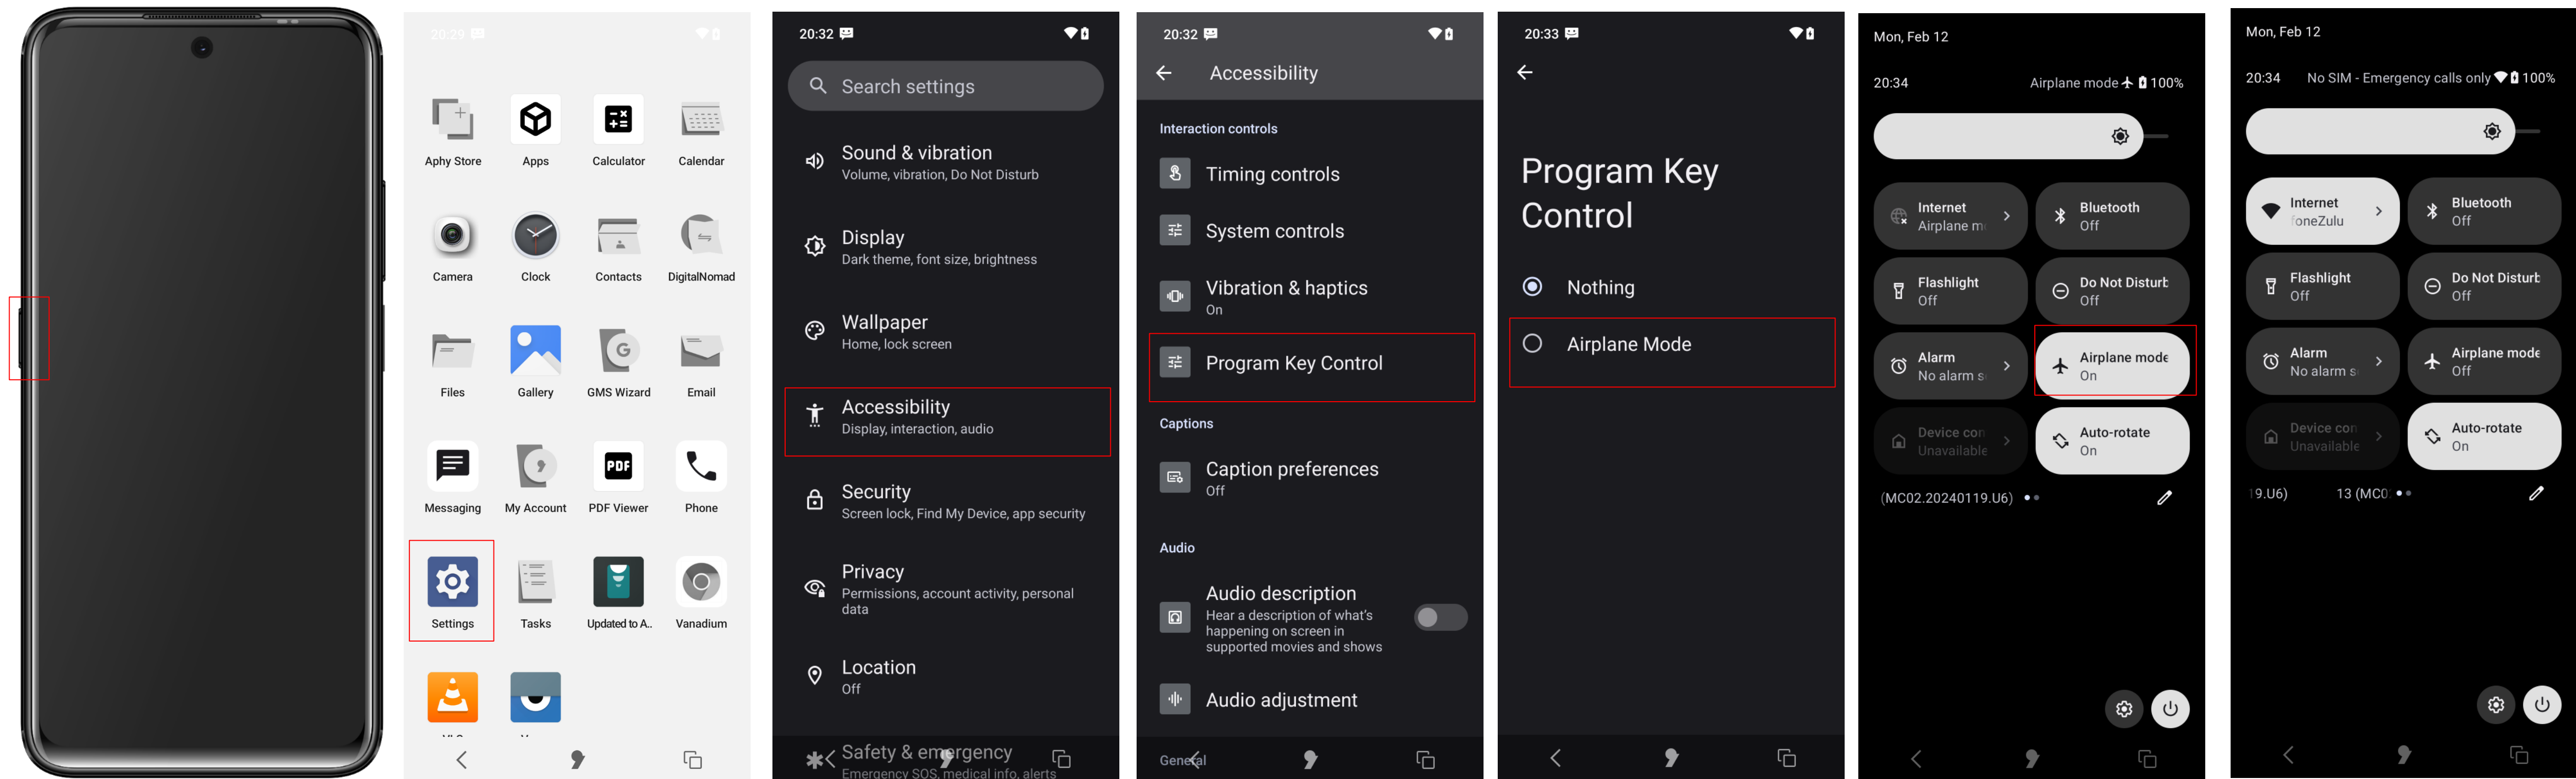

punkt.ch
info@punkt.ch

Tel +41 91 924 9003
Fax +41 91 924 9004

Punkt Tronics AG
Via Losanna 4
CH-6901 Lugano
Switzerland

Punkt.