






AC 01
Alarm clock

Quick Guide

Punkt.

English – AC 01 Instructions for use

     
Getting started

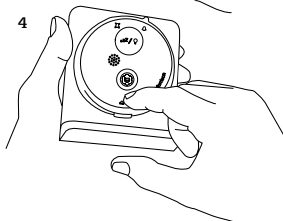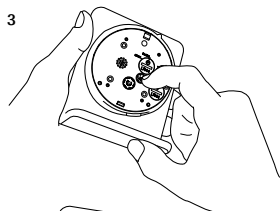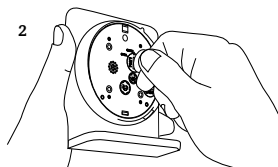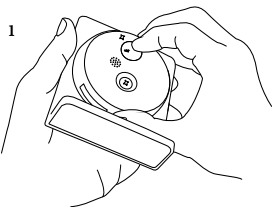

- 1 Remove the cover by pressing the key (H) which you will find in the lower part of the alarm clock back.
- 2 Open the three battery compartments (J and K) using a coin or a screwdriver; remove all three tabs placed under the batteries and close the compartments again.
- 3 Set the time by turning the appropriate knob (I).
- 4 Close the cover again.

Indicators and function keys

 - A Hour hand
- B Minute hand
- C Alarm hand
- D Alarm status indicator (white when activated)
- E Alarm status switch
- F Snooze/Light key
- G Alarm setting knob
- H Cover opening key
- I Knob to set the time
- J Alarm clock battery
- K Light batteries


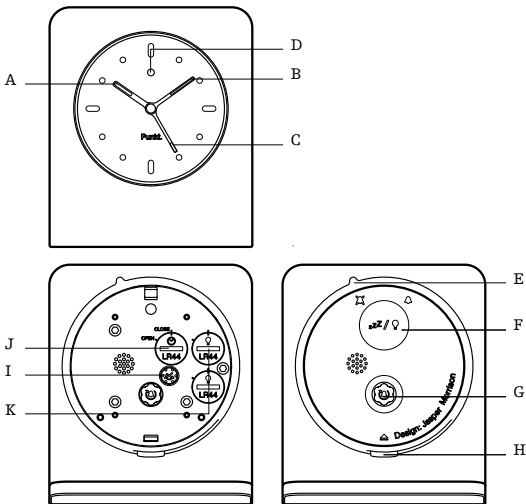


Using the alarm clock

Presetting the alarm time

- Turn the knob (G) until the hand points to the desired time.

  Turning the alarm on and off

- To activate the alarm, turn the switch (E) until the indicator is aligned on .
- When the alarm is activated, the indicator on the dial (D) shows a white circle.
- To deactivate the alarm, turn the switch (E) until the indicator is aligned on .
- When the alarm is off, the indicator (D) shows a circle of the same colour as the dial background.

Snooze function

- When the alarm rings, press the Snooze/Light key (F) to interrupt the alarm for 5 minutes.
- After 5 minutes, the alarm begins to ring again.
- The snooze function continues to work for around 40 minutes after which the alarm clock is finally turned off.

Switching the dial light on

- Press the Snooze/Light key (F) to activate the dial light.
- When the key is released, the light stays on for 2 seconds before going out.

Setting the time

- Remove the cover by pressing the key (H) which you will find in the lower part of the alarm clock back.
- Set the time by turning the appropriate knob (I).
- Close the cover again.

Batteries

Battery type

- 3 IEC LR44 batteries

Life

- The alarm clock battery has a service life of about 1 year.
- The light batteries last for 1 year on average.

Replacing the batteries

- Remove the back cover by pressing the key (H) which you will find in the lower part of the alarm clock back.
- Open the battery compartments (J and K) using a coin or a screwdriver, replace the spent batteries by new ones and close again.

Note:

The alarm and light batteries work independently; so if, for instance, the alarm battery needs to be changed, the light batteries will not necessarily have to be changed too.

